



Marvel Professional Built-in 30" All Refrigerator

Model #MP30RA2

Performance

- Dynamic Cooling Technology™ air flow system ensures even circulation and optimal cooling environment for longer lasting food preservation
- Digital controls offer precise temperature stability within one degree
- Energy-efficient variable speed compressor chills food quickly while saving energy
- One of the quietest, technologically advanced compressors available
- Integrated ion air purifier eliminates airborne bacteria and mold spores, removes odors and enhances food preservation – and it never degrades or needs replacing
- Moisture-control evaporator removes excess humidity
- Maintenance-free anti-clog condenser coil prevents dust and other airborne particles from clogging the condenser

Storage Capabilities

- 18.4 total cubic feet storage capacity
- Seamless glass shelves feature spill-proof Nano technology that contains spills and makes clean up easy
- 3/8" thick tempered glass shelves provide industry-leading durability
- 2 moisture-adjustable drawers feature soft-close slides and high/low settings for the freshest leafy vegetables and fruits
- 4 deli drawers with soft-close slides to store meats and cheeses
- 4 metal door bins provide enduring performance to securely store heavy items
- 2 dairy compartments in the door with easy-view covers
- Also features additional space for extra-large 18" pizza box storage

Touchscreen Controls

- Fast Cool: cools the refrigerator at high speed for 2 hours to rapidly chill contents
- Max Refrigerator Mode: adjusts refrigerator temp to the coldest setting for 4 hours
- Door Open Alarm: alerts when door is left open for more than 3 minutes
- Power Loss Alarm: POWER indicator light flashes, in the case of a power loss
- Temperature Sensor Alarm: alerts of temperature sensor problems
- Sabbath Mode: disables interior lights and alarms for observance of the Sabbath

Aesthetics

- Graduated theater lighting with bright, energy-efficient LED illumination from top and sidewalls for better visibility
- Robust hinge allows optimal door rotation and maximum durability
- Adjustable door stops at 90, 110 and 120 degrees

Additional Convenience

- 2-year full product warranty, 6-year full sealed refrigeration system warranty, 90-day full cosmetic parts and 12-year limited sealed refrigeration system warranty



Slim Designer Handle Shown (MP30RA2RS)



Ordering Options

Solid Stainless Steel Door, Right Hinge, Slim Designer Handle	MP30RA2RS
Solid Stainless Steel Door, Left Hinge, Slim Designer Handle	MP30RA2LS
Panel-Ready Solid Overlay Door, Right Hinge (Handle Not Included)*	MP30RA2RP
Panel-Ready Solid Overlay Door, Left Hinge (Handle Not Included)*	MP30RA2LP

Optional Accessories

Professional Handle - Vertical Door Installation (qty 1)	42249470
60"W Grille Kit	DDGK603SS
66"W Grille Kit	DDGK663SS
Flush Mount Trim Kit	PBIRFTKSS

*Consult your cabinet maker for overlay panel and handle options

Finish Options



Stainless Steel




Solid Overlay (Panel Ready)*

Optional Professional Handle



Marvel Professional Built-in 30" All Refrigerator

Model #MP30RA2

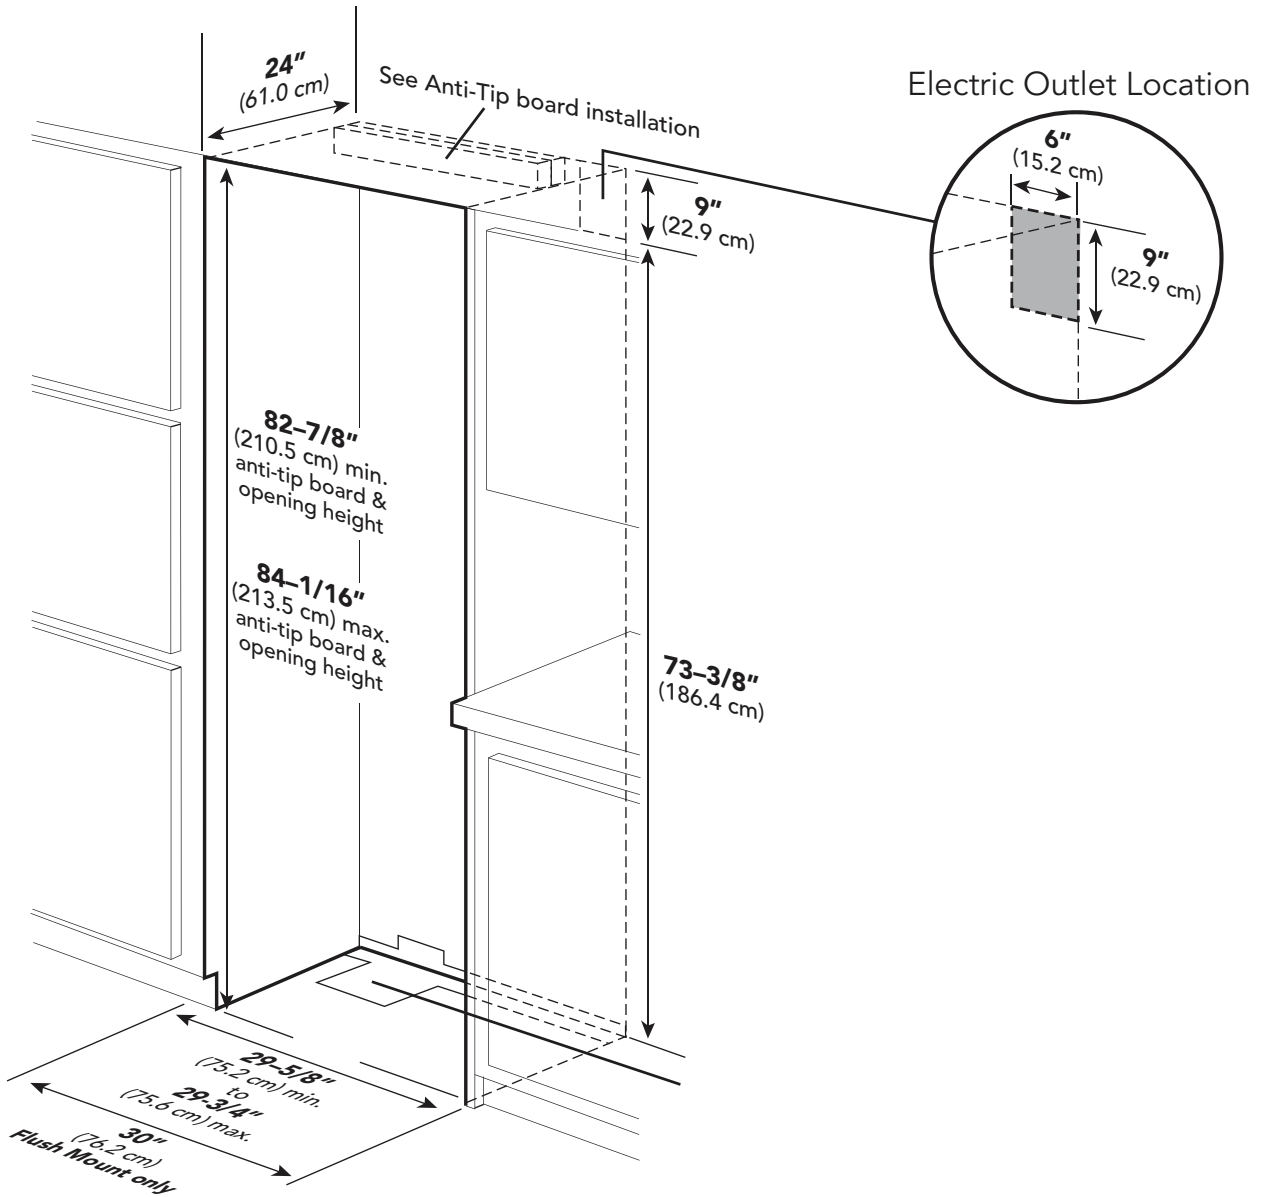

Width	30" (76.2 cm)
Overall Height (from bottom)	82-3/4" (210.2 cm) min to 84-1/16" (213.5 cm) max
Depth to front edge of side trim	22-3/16" (56.4 cm)
Depth to front of top grille	24" (61.0 cm)
Depth to front of handle endcap	26-1/2" (67.3 cm)
Cutout Width	29-5/8" (75.2 cm) min to 29-3/4" (75.6 cm) max
Cutout Height	82-7/8" (210.5 cm) min to 84-1/16" (213.5 cm) max
Cutout Depth	24" (61.0 cm) min

Electrical Requirements	115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with grounded 3-prong plug attached to product
Maximum Amp Usage	5.7 amps
Length of Power Cord	4 1/2 ft. (137 cm)
Total Capacity	18.4 cu. ft. (521 liters)
Approximate Shipping Weight	525 lbs. (238.1 kg)
Interior Finish	Arctic White
Shelving System	Spill-proof sealed 3/8" thick glass shelves
Shelf Fronts	Arctic White
Other Storage	Bottom Storage for Extra-Large Pizza Box
Interior Lighting	White LED Lighting (Top, Sidewalls)

Toe Grill Finish	Stainless Steel
Hinge	Zero Clearance
Handle	Designer (Handle not included on Overlay Models)
Control Type	Digital Controls
Temperature Range	33°F to 43°F (0.6°C to 6°C)
Lock	No
Finishes	Stainless Steel, Overlay
Agency Approvals	UL

*Specifications subject to change without notice. This spec sheet is intended only for quick reference. For complete installation details, consult the owner's guide on marvelrefrigeration.com.